

RAILKING
READY-TO-RUN™
THE COMPLETE SOLUTION

www.railking.com

Pennsylvania 6-8-6 Bantam Turbine Steam Freight Set

Operation Manual



LOCO SOUND
Loco Speed Control

RAILKING
By MTH Electric Trains

Thank you for purchasing this RailKing product.
PLEASE READ BEFORE USE AND SAVE

Table of Contents

Set Up Checklist	3
Getting Started	4
Assembling RealTrax	4
Connecting theTransformer	4
Lubricating the Engine	5
Priming the Smoke Unit	5
CouplingtheEngineandCars	6
Remote Control	6
Basic Operation	7
Operation Buttons	7
Speed Control	8
Direction Lock	8
Proto-Cast and Proto-Dispatch	9
Manual Volume Control	10
Maintenance	11
Care ofRemote Control	11
LubricationandGreasingInstructions	11
CleaningtheWheels,TiresandTrack.....	12
Locomotive Traction Tire Replacement	12
Smoke Unit Maintenance	12
Locomotive Light Bulb Replacement	13
Caboose Light Bulb Replacement	14
RailWareInteractive CD ROM	15
Troubleshooting	16
Compatibility	17
Transformer Compatibility Chart	17
Exploded View Parts	18
Service and Warranty Information	

CAUTION:ELECTRICALLYOPERATEDPRODUCT:

Not recommendedforchildrenunder10years ofage. M.T.H.recommendsadultsupervisionwithchildrenages10-16. Aswithallectricproducts,precautionsshouldbeobservedduringhandlingandusertoreducetheriskofelectric shock.

WARNING: Whensusingelectricalproducts,basicsafetyprecautionsshouldbeobserved,includingthefollowing:

Readthismanualthoroughlybeforeusingthisdevice.

- M.T.H.recommends thatallusersandpersonssupervisinguseexaminethehobbytransformerandotherelectronic equipment periodicallyforconditionsthatmayresultintheriskoffire, electricshock,orinjurytopersons,suchasdamagetotheprimary cord,plugblades,housing,outputjacksorotherparts. Intheeventssuchconditionsexist,thetrainssetshouldnotbeuseduntil properlyrepaired.
- Donotoperateyourlayoutunattended. Obstructedaccessoriesorstalledtrainsmayoverheat,resultingindamagetoour layout.
- This trainsetisintendedforindooruse. Donotuseifwateris present. Seriousinjuryorfatalitymayresult.
- Donotoperatethehobbytransformerwithdamagedcord,plug,switches,buttonsorcase.
- ThetransformerwasdesignedtooperateonregularUSHouseholdcurrent(120volt,50-60Hertz). Donotconnecttoany other sourceofpower.
- Toavoidtheriskofelectricalshock,donotdisassemblethetransformerunit. Therearenouser-serviceablepartsin side. Ifthe unitisdamagedcontactM.T.H.Serviceforinstructions.
- Thetransformerisequippedwithaninternalcircuitprotector. Ifthecircuitprotectortrips,unplugthepowercordfromthe electricalwalloutlet,checkyourlayoutforanys shortcircuits. Thecircuitbreakerwillresetautomaticallywhentheshortis removedfromthecircuit.
- Unplugthetransformerfromtheelectricalwalloutletwhennotinuse.
- Donotusethestransformerforotherthanitsintendedpurpose.

Transformer Ratings:

Input:120VAC,60HzOnly,Output:21VAC,3.75A78VA

Set Up Checklist

- Assemble RealTrax®
- Connect the transformer
- Lubricate the engine
- Prime the Smoke Unit
- Place the engine and cars on the track and couple them together
- Position remote lock-on lens
- Apply power to run as described in the Basic Operation section of these instructions.

Set Includes



Steam Engine with Loco-Sound™



Steam Tender



8-Pieces
O-31 Curve RealTrax



Track Clips



Box Car




Hopper Car




Caboose




Lock-On

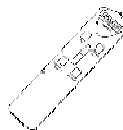

Remote Control

 


CD-Rom

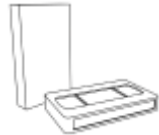

Video

 Tools Needed



Phillips Screwdriver



Pliers



Scissors



Cotton Swab or Rag



RailKing Maintenance Kit or
Light Household Oil and Bearing Grease

Optional Equipment



Microphone w/1/8" Plug



1/8" Male to Male Plug



Cassette Player

You can obtain replacement parts and replacement instructions from the M.T.H. Parts Department

e-mail: parts@mth-railking.com







phone: 410-381-2580

mail: 7020 Columbia Gateway Drive, Columbia MD 21046-1532

Getting Started



Assembling RealTrax®

The quickconnectors and built-in roadbed allow you to set up RealTrax anywhere, including carpeted surfaces.

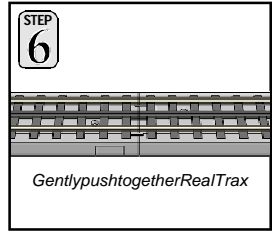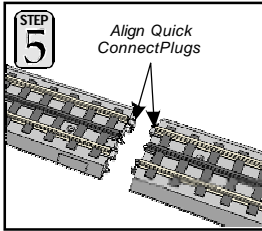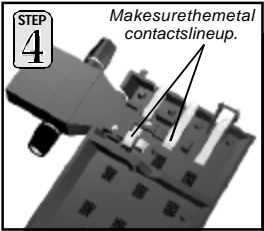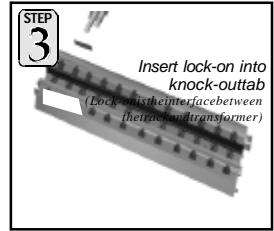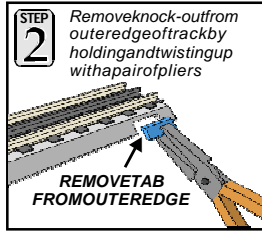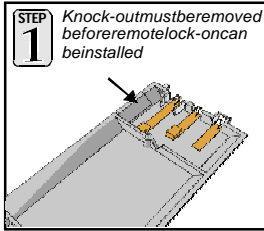

Connecting Track Clips


If you prefer not to screw your track to the table for a permanent layout, use the enclosed track clips on adjoining curved RealTrax sections to secure them in place.

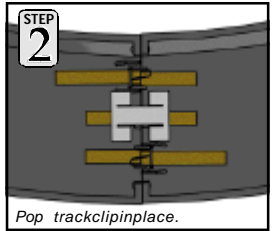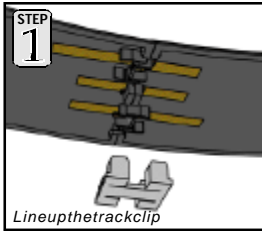

Connecting the Transformer


The 75-watt power supply included with this set provides an easy-to-use, safe power source for AC-powered trains and accessories.

- Plug the wire from the transformer into the remote lock-on's center port, then plug the transformer into the wall outlet.
- Unplug when not in use.

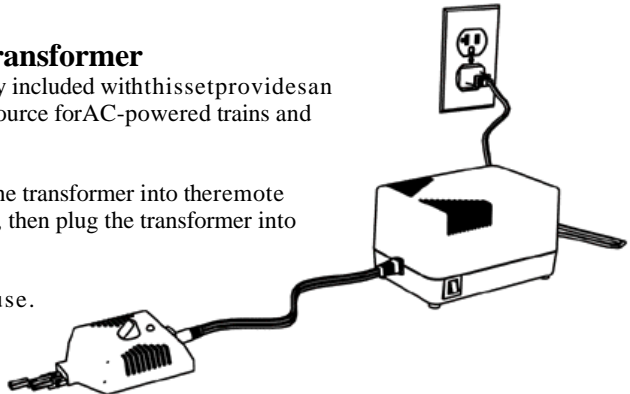


Lubricating the Engine


Lubricate all exposed moving parts before operating using a multi-purpose, plastic-compatible oil (available with M.T.H.'s Maintenance Kit, sold separately) or a light household oil. Follow the lubrication points.

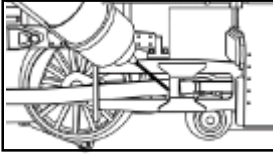

Lubricate Valve Gear

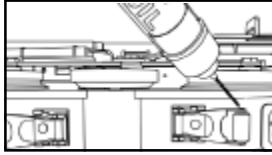

Lubricate Pick-Up Rollers
(Do Not Oil the Flat Part of Pick-Up Rollers)

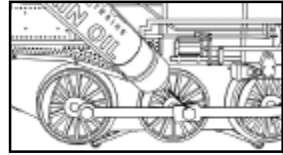


Lubricate Side Rods

Priming the Smoke Unit

You should prime the smoke unit with smoke fluid before operating. Add 15-20 drops of smoke fluid from the included pipette through the smoke stack, then gently blow into the stack to eliminate any air bubbles in the fluid.

If you choose not to prime the unit with fluid, turn the smoke unit switch located under the engine to the OFF position. **Running the engine without a primed smoke unit may cause damage.** See the "Proto Smoke Unit Operation" section of this book for more information on smoke unit maintenance.

Add 15-20 Drops
Smoke Fluid



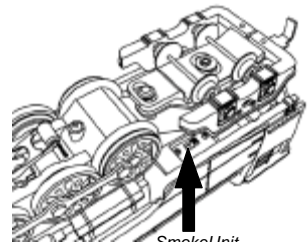



Smoke Unit
ON/OFF Switch



Running the engine without a primed smoke unit may cause damage

Coupling the Engine and Cars

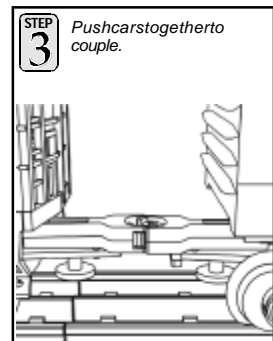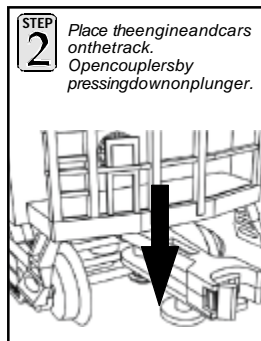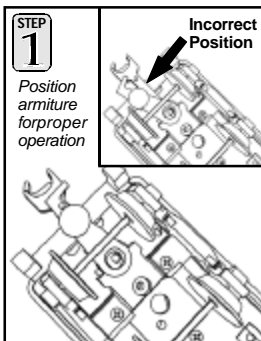

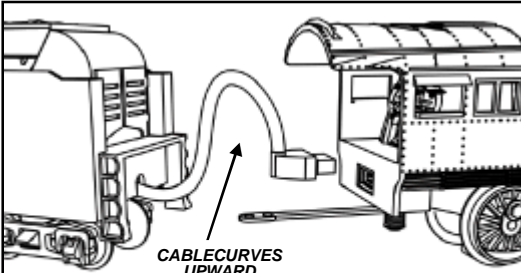

! DO NOT CONNECT This Engine To A Tender From Another Engine; It May Cause Serious Damage.

Look at the bottom of the engine and tender where each will have a color-coded stamp. If they match you may connect those two pieces; if not, don't.

- Plug tender plug into boiler socket at the back of cab.
- Connect the drawbar between the engine and tender.

Remote Control

The remote and lock-on are designed for use with moderate power supplies such as the one included with this set. It is compatible with virtually any manufacturer's engines.

STEP 1

Remove phillips screw with screwdriver on back of remote.

STEP 2

Insert two AA batteries (not included) into the remote.

STEP 3

Aim remote control at the rounded side of the lock-on sensor to send track. Lock-on sensor can be rotated to the direction you will most often receive signal.

STEP 4

Green LED flashing indicates lock-on is receiving signals from remote.

STEP 5

Control train from up to 15 feet from the lock-on.

Note: The RailKing® Remote Control and Remote Lock-on will not operate engines equipped with pre-1997 versions of Proto-Sound® or with Proto-One,™ Proto-Plus,™ Proto-Deluxe,™ aftermarket systems.

Basic Operation

Operation Buttons

Throttle Up Throttle up the power to your track by pressing the top end of the Throttle Control Rocker Switch firmly for about 5 seconds, until the engine's headlight and lighted cars burn bright. Then put the engine into motion by firmly pressing the Direction button (hold it for approximately 1 second) on your remote once. If the engine does not begin to move as soon as you firmly press the Direction button, you may not have sent enough voltage to the track to make the train move. Press the throttle up for a few more seconds until the train begins to move.


To increase or decrease track voltage, and therefore train speed, press the throttle control rocker switch. Pressing the top end of the throttle will increase voltage and speed. Pressing the bottom end of the throttle will decrease voltage and speed.

The engine will maintain the speed you set after you release the throttle until you press it again to change the voltage and speed.

Bell - To sound the bell, firmly press and release the Bell button. To turn the bell off, press and release the Bell button again. The bell will continue to ring from the time you turn it on until you press and release the button again to turn it off.


Emergency Stop Press the Emergency Stop button and all trains on the track controlled by the remote will stop until you reapply voltage. This is an easy way to shut down your trains at the end of a session or to stop suddenly if the train's path becomes obstructed.

CAUTION: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

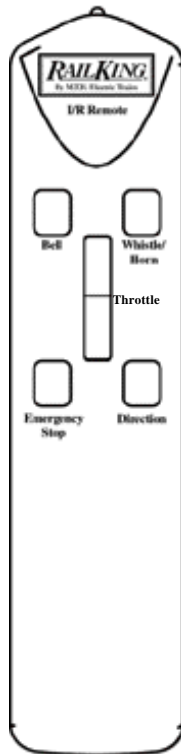

Horn/Whistle - To sound the whistle, firmly press the Horn/Whistle button. The whistle will sound for as long as you continue to depress the button. It will stop when you release the button.

Direction Your train is programmed to start in neutral. The train will always cycle neutral-forward-neutral-reverse with each press and release of the direction button. The engine is programmed to restart in neutral each time the track voltage is turned off for 25 seconds or more.

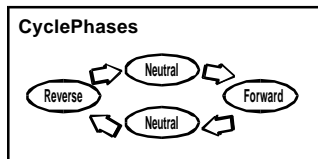

Speed Control

M.T.H. engines equipped with Loco-Sound have speed control capabilities that allow the engine to maintain a constant speed up and down grades and around curves, much like an automobile cruise control. You can add or drop cars on the run, and the engine will maintain the speed you set.

While the engine is programmed to start with the speed control feature activated, you can opt to turn it off. This means the engine's speed will fall as it labors up a hill and increase as it travels downward. It is also affected by the addition or releasing of cars while on the run. To maintain a constant speed when speed control is turned off, you need to adjust track voltage yourself.

To turn speed control on and off, put the engine in neutral, then quickly tap the transformer's Whistle button one time then quickly tap the Bell button two times, allowing approximately 1/2 second to lapse between each quick button press. Repeat the 1 whistle, 2 bells code to return to the other condition. **You will want to do this during the initial neutral upon start-up if you ever couple this engine to another engine that is not equipped with speed control to avoid damaging the motors in either engine.** Each time you shut down the engine completely, it will automatically turn speed control on.

Timing Chart				
Press Whistle Short & Firm	1/2 Sec. Pause	Press Bell Short & Firm	1/2 Sec. Pause	Press Bell Short & Firm
Total Time Lapse: 1 1/2 Seconds				



Place Engine into Neutral



=

Speed Control Repeat to Return to Normal Condition

Direction Lock

You can lock your engine into a direction (forward, neutral, or reverse) so that it will not change directions. To do this, put the engine into the direction you want and into neutral, to lock it into neutral, run it at a very slow crawl (as slowly as it will move without halting), and quickly but firmly tap the Whistle button once followed by three quick taps of the Bell button, allowing approximately 1/2 second to lapse between each quick button press. The engine will not change direction (including going into neutral) until you repeat the 1 whistle, 3 bells code to return the engine to its normal condition, even if the engine is kept without power for extended periods of time.

Place Engine into Desired Direction



=

Direction Lock Repeat to Return to Normal Condition

Proto-Cast and Proto-Dispatch:

When used with the remote lock-on included in this set, Loco-Sound equipped engines gain Proto-Cast™ and Proto-Dispatch™ features.


Proto-Cast:



Allows you to play audio recordings through your engine's speakers. You must supply the audio source (a small portable CD/tape player is sufficient) and a male-to-male mini cable (1/8" plug, like that used for the headset with a portable CD/tape player) to connect your audio source to the remote lock-on.

To use Proto-Cast

- Plug the mini-cable *first* into your audio source (usually into the headphone jack)
- Plug Cable into the "Audio" port on the right side of the remote lock-on.
- Adjust the volume. If engine sounds keep breaking through the recorded sounds, increase the volume on the audio source.

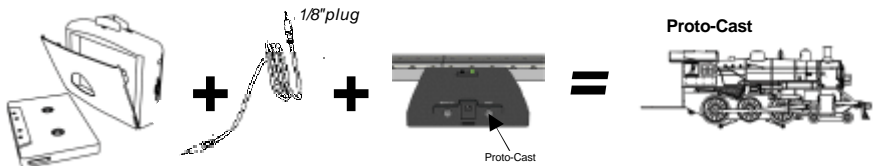

Proto-Dispatch: This feature allows you to broadcast your own voice through your engine's speakers. You must supply the microphone and a mini cable (1/8" plug, like that used for the headset with a portable CD/tape player) to connect your microphone to the remote lock-on.



To use Proto-Dispatch

- Mini-cable attached to the microphone must be a 1/8" plug.
- Plug the "Mic" into the proto-dispatch port on the left side of the remote lock-on and speak into the microphone.



When these features are in use, the locomotive's own sounds (engine sounds and bells, whistles, and horns) will be muted so that only the sounds you broadcast will be heard. Because these two features are voice activated, there will be a several second delay after you stop speaking into the microphone or turn off the audio source before the engine sounds resume. To stop using the feature and return to normal operation, unplug the cable from the lock-on jack.



If using parallel tracks with multiple Loco-Sound equipped engines, Proto-Cast and Proto-Dispatch transmissions from one track may be picked up by the other nearby engines.

If you experience popping and interference when using Proto-Cast or Proto-Dispatch, try cleaning the track with denatured alcohol as described in the "Cleaning the Wheels, Tires and Track" section of this booklet.

NOTE: M.T.H. does not recommend using Proto-Cast and Proto-Dispatch at the same time.

Manual Volume Control

To adjust the volume of all sounds made by this engine, turn the master volume control knob located under the tender clockwise to increase the volume and counter-clockwise to decrease the volume.

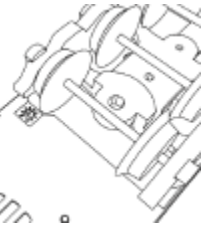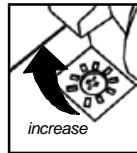

Maintenance

Care of the Remote Control


To ensure trouble-free operation:

- Do not drop the remote. It can damage the delicate electronics inside.
- Remove batteries before storing for extended periods.
- Any attempt by anyone other than an authorized M.T.H. repair person to open and repair the handheld transmitter or lock-on may result in damage and the loss of warranty protection.
- If your train responds inconsistently, replace old batteries with fresh ones. Do not mix old and new batteries.


Lubrication Instructions

The engine should be oiled and greased in order to run properly.


Regularly lubricate all side rods and linkage components and pickup rollers to prevent squeaking. Use light household oil, such as that found in M.T.H.'s maintenance kit. Do not over oil. Use only a drop or two on each pivot point.

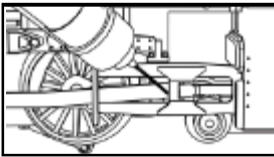

Lubricate Valve Gear

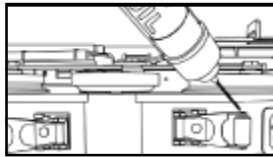


Lubricate Pick-Up Rollers
(Do Not Oil the Flat Part of Pick-Up Rollers)

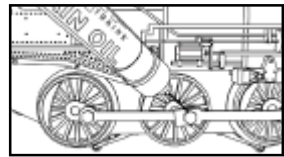

Lubricate Side Rods

Greasing Instructions

The locomotive's internal gearing was greased at the factory. Grease engine every 50 hours of use or one year. Use a lithium based grease and follow the greasing instructions.

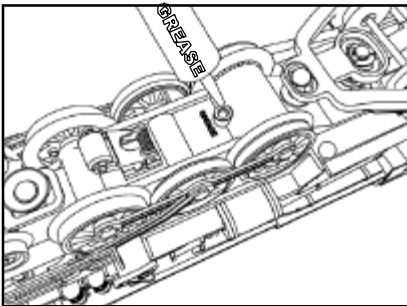

- Remove the screw from the chassis to open the grease port.
- Insert the grease tube tip into the port and squeeze the tube once or twice to add grease to the gearbox.
- Wipe off any excess grease and replace the phillips screw securely.

Cleaning the Wheels, Tires and Track


Periodically check the locomotive wheels and pickups for dirt and buildup, which can cause poor electrical contact and traction and prematurely wear out the neoprene traction tires. Wheels and tires can be cleaned using denatured (not rubbing) alcohol applied with a cotton swab.




To clean the track, use Rail King Track Cleaning Fluid and a clean rag or denatured (not rubbing) alcohol. Unplug the transformer and wipe the rails of the track, turning the rag frequently to ensure that you are using clean cloth on the rails. Because the manufacturing process leaves a coating on Real Trax center rail, you should clean the rails after the first 30 minutes of use (you may notice an electrical smell during initial use as the coating wears off; this is normal). Thereafter, keep an eye on the track and clean it when it gets dirty to ensure good electrical contact and to lengthen the life of the tires.

Traction Tire Replacement Instructions

Your locomotive is equipped with two neoprene rubber traction tires on the rear set of flanged drivers. While these tires are extremely durable, you may need to replace them at some point.

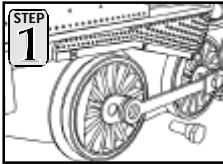

- Remove the side rods (the rods that connect each drive wheel to the other) from the wheels in order to slip the new tire over the grooved drive wheel. These bolts can be loosened with a 5mm nut driver.
- Clean the groove using a cotton swab and denatured alcohol.

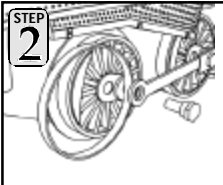

- Make sure the old tire has been completely removed from the groove in the drive wheel, using a razor blade or small flat head screwdriver to pry away any remains.
- Clean the groove using a cotton swab and denatured alcohol.
- Slip the new tire onto the wheel. You may find it useful to use two small flat head screwdrivers to stretch the tire over the wheel.
- If you twist the tire while stretching it over the wheel, you will need to remove and reinstall the tire. Otherwise your engine will wobble while operating.
- Make sure the tire is fully seated inside the groove. Use a razor blade to trim away any excess tire that doesn't seat itself inside the groove properly.

ProtoSmoke® Unit Operation

This steam locomotive contains a smoke unit that outputs smoke through the smokestack on the boiler of the engine. The smoke unit is essentially a small heating element and wick that soaks up and then heats a mineral oil-based fluid that emits a harmless smoke. The smoke is then forced out of the stack by a small electric fan.


With a few easy maintenance steps, you should enjoy trouble-free smoke unit operation for years.

- When preparing to run this engine, add 15-20 drops of smoke fluid through the smokestack. We recommend M.T.H. ProtoSmoke, Seuthe, LGB, or LVTS fluids (a

small pipette of ProtoSmoke fluid is included). Do not overfill the unit or the fluid may leak out and coat the interior engine components.


- If you choose not to add the fluid (or have already added the fluid but choose to run smoke-free), turn off the smoke unit switch located under the engine body. **Failure either to add fluid to the unit or to turn it off may damage the smoke unit heating element and/or wicking material.**

Add 15-20 Drops
Smoke Fluid

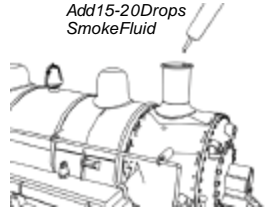


Running the engine without a primed smoke unit may cause damage

- When the smoke output while running the engine begins to diminish, add another 10-15 drops of smoke fluid or turn the smoke unit off.
- When storing the unit for long periods of time, you may want to add about 15 drops of fluid to prevent the wick from drying out.
- After removing the engine from storage, add another 25 drops of fluid, letting the wick soak up the fluid for 15 minutes prior to operation.

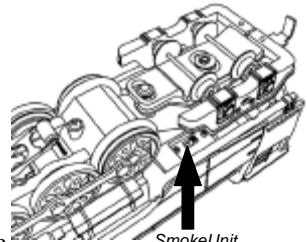

Smoke Unit
ON/OFF Switch

If you experience poor or no smoke output when the smoke unit is on and has fluid, check the wick to see if it has become hard, blackened, and unabsorbent around the heating element. Remove the boiler as shown below. Remove the smoke unit inspection cover from the locomotive's body (see right). After removing the chassis and inspection cover screws, lift the inspection plate away and inspect the wick. If it is darkly discolored and hard, it should be replaced. When priming new wick add 40 drops.

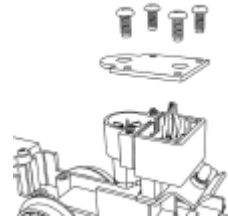

Smoke Unit Cover



Wickin
Poor
Condition



Wickin
Good
Condition

Locomotive Light Bulb Replacement

To replace the light bulb in the locomotive, follow the boiler removal instructions below.


STEP
1

Remove the four Phillip screws from the chassis then lift the body away from the chassis.



STEP 1






Once the locomotive boiler has been removed from its chassis, locate the bulb bracket as seen in the illustration on the right and rotate the headlight bulb counter-clockwise to remove.

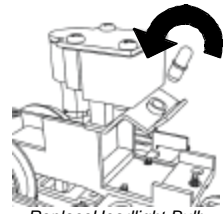

Replace Headlight Bulb

Caboose Light Bulb Replacement

To replace the interior light bulbs follow these instructions and see the diagrams below.

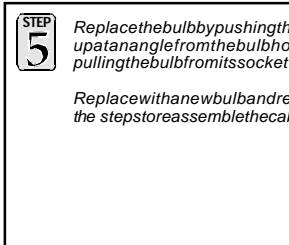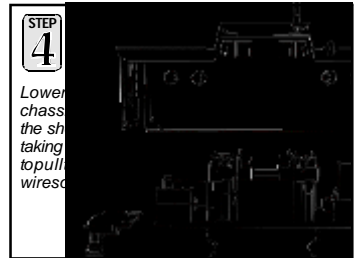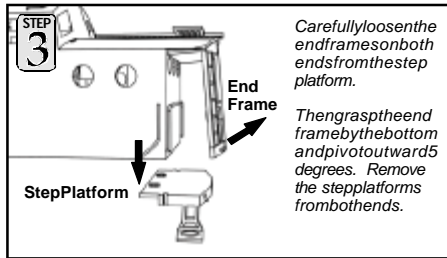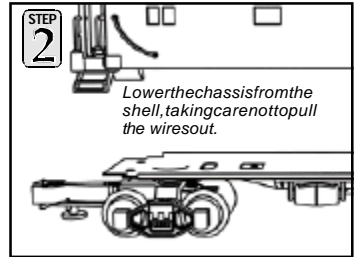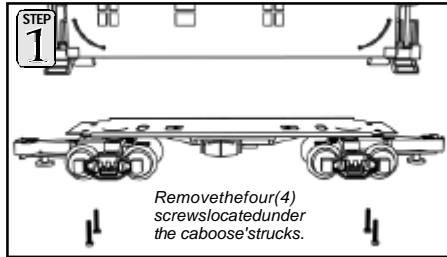

Light Bulb
#CG-0000017)

Quick-Start Video

The included VHS Quick-Start video demonstrates the start-up and basic operation of this set as well as other information about model railroading. You may find it helpful to view the video before operating this set.

RailWare Interactive CD ROM

M.T.H. provides a free RailWare CD ROM in each Ready-To-Run set. It is full of helpful information on M.T.H. product history, track planning software, a dealer finder, and information and video clips on Loco-Sound and Proto-Sound 2.0. Follow the directions below to use the CD ROM.

Minimum System Requirements: Pentium 100, 16MB RAM, Windows 95 or later, CD ROM drive, Sound Card, display properties set to greater than 256 colors. The CD will not work on a Mac OS unless you run VirtualPC®.

Running RR-Track Software

You may run the RR-Track software directly off of the CD ROM or you may install the software to your hard drive.

1. On the Desktop, click on the icon that says My Computer.
2. Find your CD ROM drive.
3. With the M.T.H. CD ROM in the drive, double click on the icon for the CD ROM drive.
4. Find the folder on the CD ROM entitled INSTALLATION.
5. Choose the folder inside entitled RRTRAXSETUP.
6. Run the file in that folder called SETUP.EXE and follow the directions it provides.

The program may ask you for a registration code. If it does type in "M.T.H." and it will run.

Additional track libraries can be obtained directly from RR-Track. See their website for more information www.rtrack.com.

Installing Adobe Acrobat Software

To read some of the electronic documents included on the CD ROM, you will need to install the Adobe Acrobat Reader® if it is not already on your computer. To install the software:

1. On the Desktop, click on the icon that says My Computer.
2. Find your CD ROM drive.
3. With the MTH CD ROM in the drive, double click on the icon for the CD ROM drive.
4. Find the folder on the CD ROM entitled INSTALLATION.
5. Choose the folder inside entitled ACROBATREADER.

*If you are running Windows 95, 98 or NT choose the folder 32BIT. Run the file AR32E301.EXE and follow the directions it provides.

If you have problems you cannot resolve by using these directions, contact custserv@mth-railking.com or call 410-381-2580 for further help.

Troubleshooting Loco-Sound™ Problems

Although Loco-Sound has been designed and engineered for ease of use, you may have some questions during initial operation. The following table should answer most questions. If your problem cannot be resolved with this table, contact M.T.H. for assistance (e-mail: service@mth-railking.com; telephone: 410-381-2580; fax: 410-423-0009; mail: 7020 Columbia Gateway Drive, Columbia MD 21046-1532).

Starting Up	Remedy
When I first turn the power on, the engine will not begin to run.	This is normal behavior. To prevent accidental high-speed start-ups, Loco-Sound is programmed to start up in neutral any time track power has been turned off for several seconds. See the "Basic Operation" section for more details.
The engine will not start after I press the Direction button.	You may not be sending enough power to the track to power the engine. Press the throttle up for a few more seconds to increase track power.
Whistle	Remedy
I can't get the whistle to blow when I press the whistle button.	You may be pressing the button too quickly. Try pressing the whistle button more slowly, taking approximately one full second to fully depress the button.
Bell	Remedy
I can't get the bell to ring when I press the bell button.	You may be pressing the button too quickly. Try pressing the bell button more slowly, taking approximately one full second to fully depress the button.
Lock-out	Remedy
I can't get the engine to run after I power up the transformer. It's still with the engine sounds running.	The engine may be locked into the neutral position. Follow the procedure in the "Lock into a Direction" section to unlock the engine's direction.
The engine won't lock into forward, neutral, or reverse.	Engine speed must be below 10 scale mph (approx. 10 volts or less in conventional mode).
Volume	Remedy
The sounds seem distorted, especially when the Horn or bell is activated.	Loco-Sound volume is set too high. Turn the volume control knob on the bottom of the chassis counter-clockwise to reduce the volume.
No sound.	Volume is set too low, adjust volume control knob on the bottom of the chassis clockwise to increase the volume or check connector to speaker.
Proto-Cast and -Dispatch	Remedy
When I try to play music or my voice through my engine's speakers, there is popping and interference.	Clean the track with denatured alcohol, as described in the "Cleaning the Wheels, Tires, and Track" section of this book.
My Proto-Cast sounds play too quietly or unclearly.	Unplug the cable between the audio source and the remote lock-on. Re-plug it into the audio source first, then into the lock-on, pushing firmly to make sure it is fully installed.
When I try to play Proto-Cast, the engine's sounds keep breaking in on my recording.	Your recording may be playing too quietly to trigger the engine to stop playing its own sound set. Turn up the volume of the audio source you are using.
When I run two Loco-Sound engines on tracks near each other, the Proto-Cast and Dispatch sounds play from both engines, not just from the one connected to the audio source or microphone.	This is normal behavior. Because Loco-Sound uses radio waves to transmit the sound to the engine, other Loco-Sound engines in the same range will also pick up the sound. Try moving one of the sets.

Compatibility

While this Ready-To-Run set is equipped with everything you need to operate it, the design allows flexibility. The train will operate on any traditional O-31 or larger O Gauge track system, including the RealTrax® included with this set or traditional tubular track. It is also compatible with most standard AC transformers, including the hobby transformer packaged with your set.

Transformer Compatibility and Wiring Chart

Note that many of the operational commands described in these instructions require a bell button, so if you are using a transformer other than the one included in this set and your transformer does not have its own bell button, you should consider adding one to get the full benefit of the system.

Transformer Model	Center Rail	Outside Rail	Min/Max. Voltage	Power Rating	Transformer Type
MTH Z-500	Red Terminal	Black Terminal	0-18v	50-Watt	Electronic
MTH Z-750	Red Terminal	Black Terminal	0-21v	75-Watt	Electronic
MTH Z-4000	Red Terminal	Black Terminal	0-22v	390-Watt	Electronic
Lionel 1032	U	A	5-16v	90-Watt	Standard
Lionel 1032M	U	A	5-16v	90-Watt	Standard
Lionel 1033	U	A	5-16v	90-Watt	Standard
Lionel 1043	U	A	5-16v	90-Watt	Standard
Lionel 1043M	U	A	5-16v	90-Watt	Standard
Lionel 1044	U	A	5-16v	90-Watt	Standard
Lionel 1053	U	A	8-17v	60-Watt	Standard
Lionel 1063	U	A	8-17v	60-Watt	Standard
All-Trol	Left Terminal	Right Terminal	0-24v	300-Watt	Electronic
Dallee Hostler	Left Terminal	Right Terminal			Electronic
Lionel LW	A	U	8-18v	75-Watt	Standard
Lionel KW	A or B	U	6-20v	190-Watt	Standard
Lionel MW	Outside Track Terminal	Inside Track Terminal	5-16v	50V.A.	Electronic
Lionel RS-1	Red Terminal	Black Terminal	0-18v	50V.A.	Electronic
Lionel RW	U	A	9-19v	110-Watt	Standard
Lionel SW	U	A	Unknown	130-Watt	Standard
Lionel TW	U	A	8-18v	175-Watt	Standard
Lionel ZW	A, B, C or D	U	8-20v	275-Watt	Standard
Lionel Post-War Celebration Series ZW	A, B, C or D	Common	0-20v	135/190 Watt	Electronic


6-8-6 Bantam Turbine Steam Locomotive Engine Parts

Name and Number	Part #
1.) Stanchion (black) (plastic)(3.0mm long)	FB-1200242
2.) Handrail (nickel) (20.0x207.0mm)(right)	FB-1210040
3.) Handrail (nickel) (20.0x207.0mm)(left)	FB-1220047
4.) Shell (Brunswick green, gray) (Pennsylvania)(#6200)(Die-cast metal)	FB-1200185
5.) Marker lens (green) (2.2x13.3mm)(2.8x1.2)(plastic)	FA-1230003
6.) Lens (clear) (headlight)(7.0x6.0x13.0mm)	FA-1230022
7.) Number plate (Tuscan & gold) (#6200)(Keystone)(boiler front)	FB-1230005
8.) Smoke Unit (Proto-Sound® 2.0)	AA-0000029
9.) Bulb (6v)(clear) (small globe)(screw base)(headlight)	CA-0000038
10.) Screw (4/40x6.0mm)(roundhead)	IA-0000003
11.) Bracket (black) (3 step)(headlight/smoke unit)(metal)	IH-0000172
12.) Traction tire	DE-0000022
13.) Bolt (M3x8.0mm)(nickel) (5.0mm hex head)(4.0x2.5mm shoulder)	IA-0000087
14.) Side rod (nickel) (1.0x85.0mm)(4 holes)	EC-1250024
15.) Drive block (black)(4 axle)	DF-1200028
16.) Insulator (black) (top)(square)(pick-up)	BD-0000009
17.) Screw (nickel) (M3x6.0mm)(roundhead)	IA-0000015
18.) Ferrite bead	AI-0000030
19.) Bracket (Aluminum) (for Loco-Sound™ board)	IH-0000171
20.) Board (Loco-Sound™)	AE-0000003
21.) Screw (M2x4.0mm)(roundhead)	IA-0000058
22.) Switch (small)	BB-0000009
23.) Screw (yellow Zinc) (M2.5x6.0mm)(roundhead w/ lock washer)	IA-0000089
24.) Screw (6/32x10.0mm)(roundhead)	IA-0000040
25.) Motor mount (black)	BI-0000034

26.) Screw (6/32x6.0mm)(roundhead)	IA-0000027
27.) PC board (green) (w/ 10 pin female plug)	AG-0000039
28.) Tach board (for Proto-Sound 2.0® and Loco-Sound™)	AG-0000033
29.) Motor (RS-365SH) (8.0x21.0mm worm gear)(13.0mm long threads) (9.0x30.0mm white flywheel w/ black stripes) (tach board mounting strap)	BE-0000076
30.) Capacitor (blue)(.01 uF) (16.0x2.0mm)(w/ 2 wires)	AI-0000031
31.) Pin (black)(5.0x25.0mm) (8.0x1.5mm flathead)(2 e-clip grooves)	IG-0000033
32.) Draw bar (black) (10.0x105.0mm)(multiple bend w/ tender hook)	FB-1200183
33.) Washer (5.0x12.0x0.8mm)	ID-0000012
34.) E-clip (3.5x9.0x0.6mm)	IF-0000009
35.) Spring (nickel) (6.0x12.5x13.0mm)(0.6mm thick wire)	IE-0000062
36.) Washer (5.0x12.0x0.6mm)	ID-0000053
37.) Truck (black) (3 axle)(trailing)(boiler)	DA-1240033
38.) Spacer (black) (7.0x9.0x4.0mm)(metal)	ID-0000096
39.) Screw (6/32x6.0mm)(washer head)	IA-0000214
40.) Screw (6/32x8.0mm)(roundhead)	IA-0000050
41.) Nut (nickel)(2.5x5.0x10.0mm)	IC-0000005
42.) Insulator (black) (pick-up)(bottom)(square)(plastic)	BD-0000001
43.) Pin (black)(3.0x15.0mm) (6.0x1.3mm roundhead)(1 e-clip groove)	IG-0000003
44.) Bracket (black)(lead truck) (37.0mm long)(1.0mm thick)(2 bends)	GA-1200068
45.) Spring (nickel) (6.5x9.0mm)(0.5mm thick wire)	IE-0000009
46.) E-clip (2.5x6.0x0.5mm)	IF-0000004
47.) Insulator washer (white) (6.0x4.0x2.5mm)(plastic)	ID-0000033
48.) Washer (black) (3.0x6.0x0.4mm)(fiber)	ID-0000040
49.) Insulator (clear) (13.0x19.0x0.1mm)(single hole)	ID-0000024
50.) Truck (black) (3 axle)(boiler)(lead)	DA-1230023
51.) Spacer (black) (3.5x15.0x2.5mm)(metal)(cupped)	ID-0000014

52.) Pick-up (8.0x11.0mm roller)(28.0mm long)	BD-0000048
53.) Screw (4/40x4.0mm)(roundhead)	IA-0000021
54.) Wire nut (yellow)	BI-4500003
55.) Screw (6/32x4.0mm)(roundhead)	IA-0000060
NS.) Bracket (black) (3 axle)(leading)(truck)(engine)(square opening)	IH-1230007
NS.) Bracket (black) (3 axle)(trailing)(truck)(engine) (oval opening)	IH-1240001
NS.) Wire harness (10 pin green female PCB)	BC-1200021
NS.) Wire harness (7 pin black male plug)	BC-1200014
NS.) Wire harness (5 pin black male plug)	BC-1200015
NS.) Wire harness (4 pin black male plug)	BC-1200020


6-8-6 Bantam Turbine Steam Locomotive Engine Parts

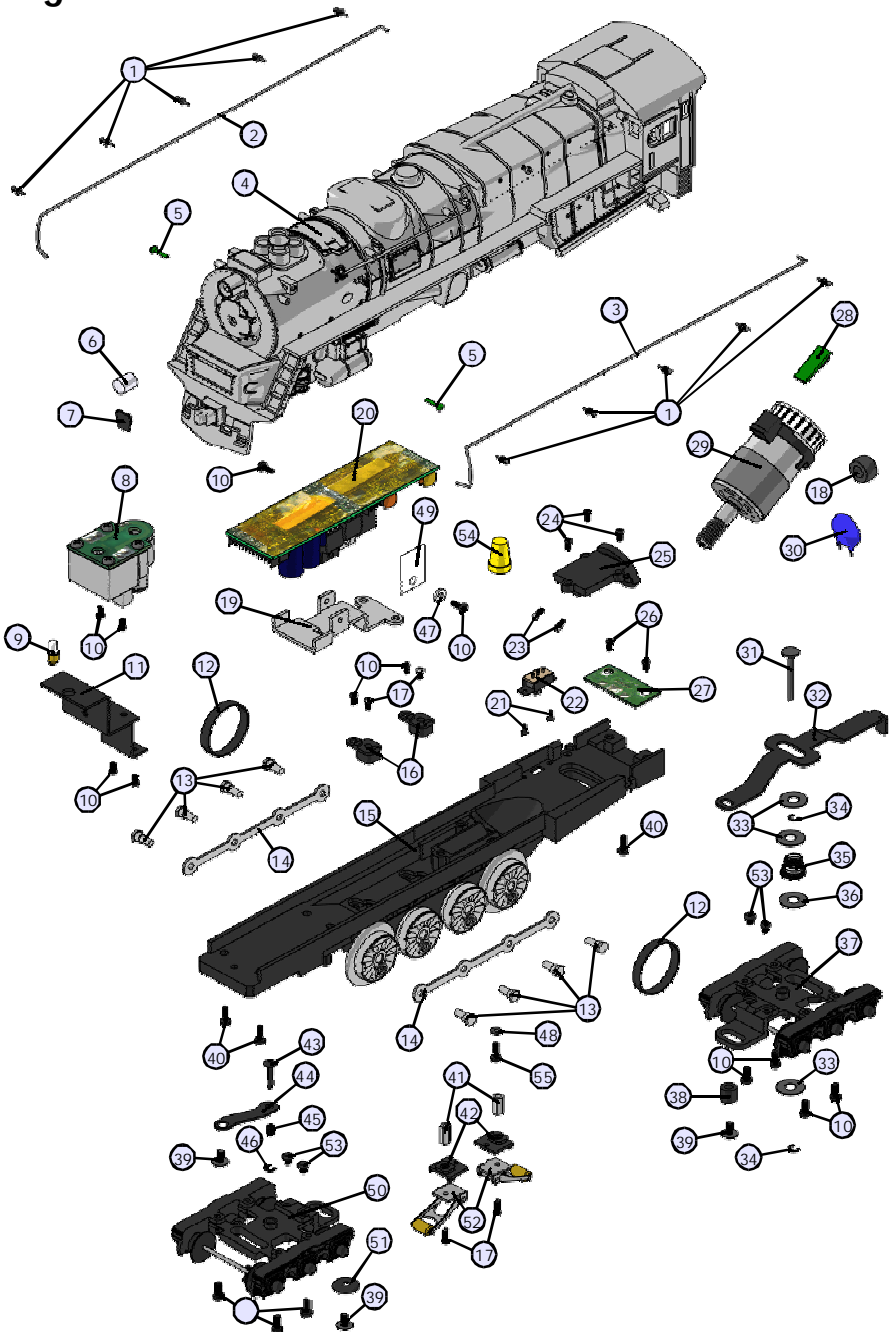

6-8-6 Bantam Turbine Steam Tender Parts

Name and Number	Part #
1.) Shell (Brunswick green) (Pennsylvania)(#6200)(plastic)	GA-1200069
2.) Weight (black) (metal)(34.4x39.3x19.8mm) (w/ 3 holes tapped for 4/40 screws)	II-0000015
3.) Wire harness (black male 10 pin plug)	BC-1200106
4.) Screw (4/40x6.0mm)(roundhead)	IA-0000003
5.) Spacer (black) (3.0x6.0x4.0mm)(plastic)	ID-0000071
6.) Volume pot (blue)(small)	BI-0000040
7.) Screw (M3x8.0mm)(roundhead)	IA-0000035
8.) Screw (M3x6.0mm)(roundhead)	IA-0000016
9.) Speaker cone (black) (44.0x48.3x23.0mm)(2 screw hole tabs)(plastic)	BF-0000016
10.) Speaker (Cuistack)(GF0501, 8 ohms, 0.25 watt)	BF-0000015
11.) Gasket (black) (speaker ring)(43.8x49.8x3.0mm)(foam)	IB-0000009
12.) Chassis (black) (tender)(has holes for battery charger jack)	GB-1200048
13.) Screw (M3x16.0mm)(washer head)(self-drilling threads)	IA-0000025
14.) T-bar (black) (4.0x20.0mm)(plastic)	IG-0000001
15.) Coupler (black) (mechanical)(51.5mm long)	DD-0000039
16.) Armature (black) (45.0mm long)	DD-0000040
17.) Spring (nickel) (6.5x11.0mm)(w/ 0.4mm thick wire)	IE-0000007
18.) Washer (black)(plastic) (4.6x8.6x2.0mm)(inside 7.0x1.0mm)(cup shaped)	ID-0000060
19.) E-clip (3.0x8.0x0.5mm)	IF-0000002
20.) Screw (6/32x6.0mm)(washer head)	IA-0000214
21.) Truck (black) (3 axle)(leading/trailing)(tender)	DA-1250005
22.) Draw bar (black) (60.7x10.0x1.2mm)(1 step, 2 bends) (2 large holes, 1 small hole)	GA-1200027
NS.) Axle bearing (black) (3 axle)(plastic)	DC-0000005

6-8-6 Bantam Turbine Steam Tender Parts

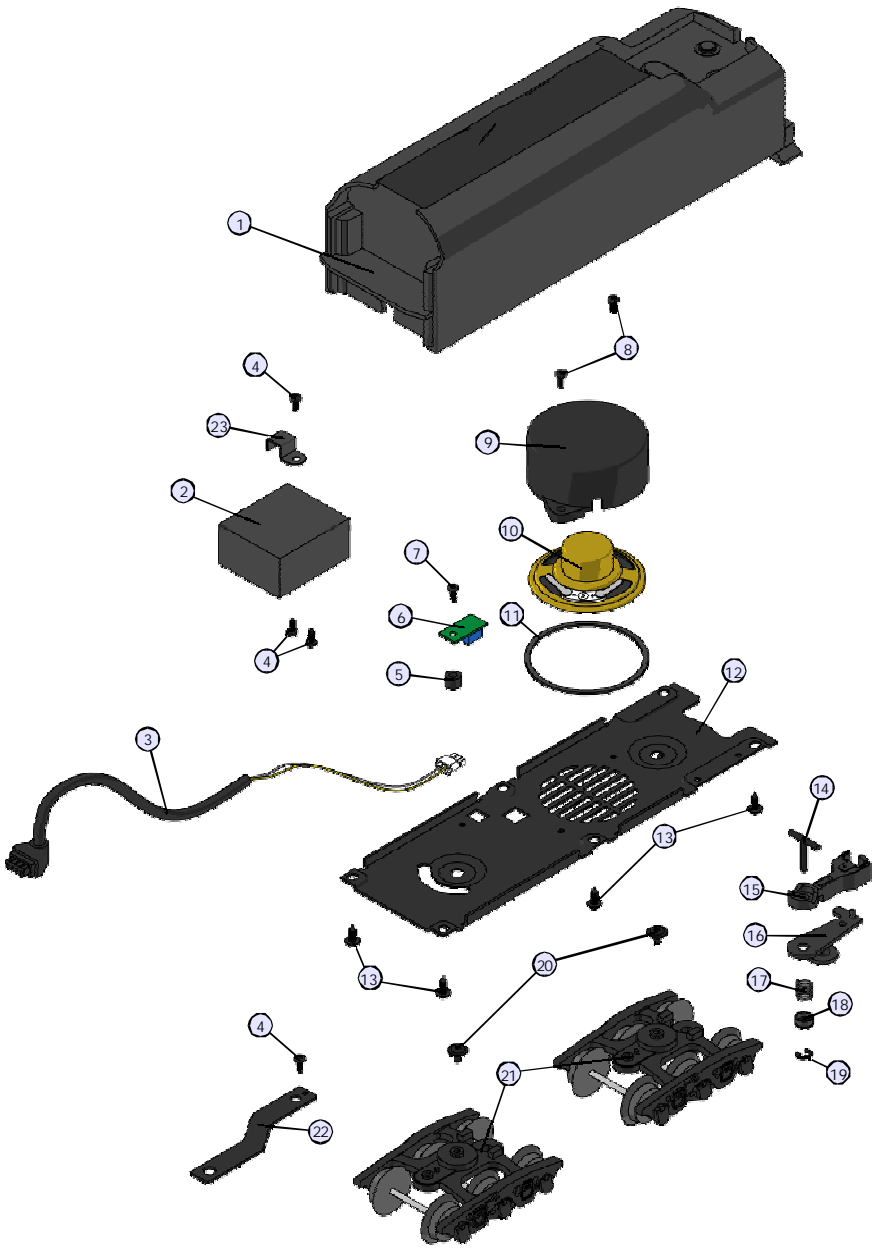

Service & Warranty Information

How to Get Service Under the Terms of the Limited One-Year Warranty

For warranty repair, follow the instructions below to obtain warranty service.

- First, e-mail, write, call or fax an Authorized M.T.H. Service Center in your area or M.T.H. Electric Trains to obtain Repair Authorization. You can find the list of Authorized Service Centers on the M.T.H. website, www.mth-railking.com. Otherwise, contact M.T.H. (at e-mail: service@mth-railking.com; 7020 Columbia Gateway Drive, Columbia, MD 21046; tel: 410-381-2580; fax: 410-423-0009), stating when the item was purchased and describing the problem. If you contact M.T.H., you will be given a return authorization number to assure that your merchandise will be properly handled upon its receipt.
- **CAUTION:** Make sure the product is packed in its original factory packaging including its foam and plastic wrapping materials so as to prevent damage to the merchandise. The shipment must be prepaid and we recommend that it be insured. *A cover letter including your name, address, daytime phone number, e-mail address (if available), Return Authorization number, a copy of your sales receipt and a full description of the problem must be included to facilitate the repairs. Please include the description regardless of whether you discussed the problem with a service technician when contacting the Service Center or M.T.H. for your Return Authorization.*
- Please make sure you have followed the instructions carefully before returning any merchandise for service.

Limited One-Year Warranty

All M.T.H. products purchased from an Authorized M.T.H. Train Merchant are covered by this warranty.

See our website at www.mth-railking.com or call 1-888-640-3700 to identify an Authorized M.T.H. Train Merchant near you.

M.T.H. products are warranted for one year from the date of purchase against defects in material or workmanship, excluding light bulbs, pick-up rollers and traction tires. We will repair or replace (at our option) the defective part without charge for the parts or labor, if the item is returned to an Authorized M.T.H. Service Center or M.T.H. Electric Trains within one year of the original date of purchase. This warranty does not cover damages caused by improper care, handling, or use. Transportation costs incurred by the customer are not covered under this warranty.

Items sent for repair must be accompanied by a return authorization number, a description of the problem, and a **copy of the original sales receipt from an Authorized M.T.H. Train Merchant**, which gives the date of purchase. If you are sending the item to M.T.H., call 410-381-2580, fax 410-423-0009, or e-mail the Service Department at service@mth-railking.com to obtain a return authorization number. If you are sending this product to an Authorized Service Center, contact that Center for their return authorization.

This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

Service Department
M.T.H. Electric Trains
7020 Columbia Gateway Drive
Columbia, Maryland 21046-1532



www.railking.com